



# ***Global Dual Timer Condenser***

## **Users Manual**

Baccara Geva Ltd.


Head office & factory

Kvutzat Geva, 1891500, Israel

Tel. 972 4 6535960 | Fax 972 4 6531445

eMail: [info@baccara-geva.com](mailto:info@baccara-geva.com)

Web site: [www.baccara-geva.com](http://www.baccara-geva.com)

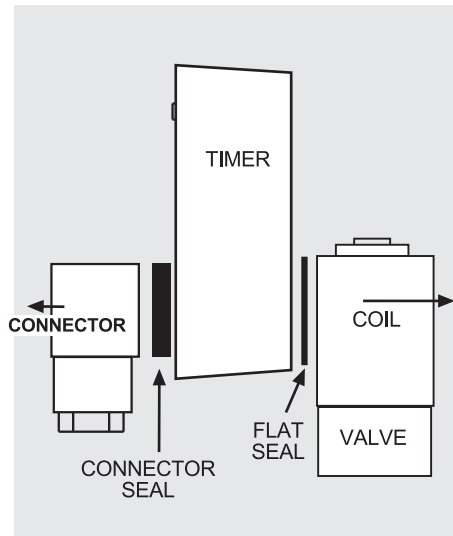

POLLUTION DEGREE 2  
INSTALLATION CATEGORY II

## INSTALLING INSTRUCTIONS

The Timer is suitable for any alternate voltage between 24 - 240 volt. +10% / - 15%. Max.current 1A. Use an appropriate coil voltage. Fit the seal on the coil terminals and then assemble the Timer onto it.

Make sure the display is on the farrest side of the valve.

Assemble the connector and seal, then fasten to the coil with the supplied screw.

**Attention!** The screw must be fastened in order to secure sealing of the unit.

Assemble coil and Timer unit on to the valve before connecting to the electricity. After connecting to the electricity the timer will start to work.

The Timer is factory pre-programmed to operate 4 seconds every 10 minutes.

Max. **ON** - 24 hours. Max. **OFF** - 24 hours.

Note: The Timer can be programmed before electrical connection.

## TO PROGRAM TIMER

Press 2 seconds on **SET**

Set time **ON**:

**ON** and the number of seconds “blink”.

Set the seconds by **ADJ** and end by pressing **SET**.

**ON** and the number of minutes “blink”.

Set the minutes by **ADJ** and end by pressing **SET**.

**ON** and number of hours “blink”.

Set the hours by **ADJ** and end by pressing **SET**.

Set time **OFF**:

**OFF** and the number of seconds “blink”.

Set the seconds by **ADJ** and end by pressing **SET**.

**OFF** and the number of minutes “blink”.

Set the minutes by **ADJ** and end by pressing **SET**.

**OFF** and number of hours “blink”.

Set the hours by **ADJ** and end by pressing **SET**.


Having ended the programming, the Timer starts automatically with valve operation.

### MANUAL OPERATION

Press for 3 seconds on **ADJ** and **SET**. The valve will operate for the programmed time and then will return to the automatic cycle.

**Manual operation is used for the following:**

- To turn on the LCD; when the Timer is *not* connected to an external electrical source.

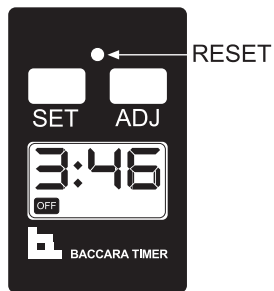

- Leave **OFF** position
- Testing of condenser valve during work

### TIMER STOPPAGE:

Press **SET** until **OFF** is displayed.

### RESET:

Press **RESET** resumes the program to 4 seconds ON - 10 minutes OFF.

**NOTE:** 10 minutes after the Timer is disconnected from electricity, it will enter Sleep mode, and the display screen will turn off.

When the Timer is reconnected it will turn on independently and operate according to the last Program data (ON & OFF).



**WARNING!**

1. Do not use this device in a manner not specified in this user manual.
2. A disconnect appliance needs to be provided in the final installation of the device.